



Please follow these instructions to set the system clock by station dialing (available on IPS & IVS 2 2200 R3.1 or higher):

**To set up the system clock from Single Line Telephone and PS (CM15130 must be a 0 for Station COS):**

1. Go off hook and receive dial tone
2. Dial the system clock Setup feature access code (access code must equal A197 in CM20) and receive feature dial tone
3. Dial the new time (6 digits) **(Note 1) (Note 2)**
4. Receive service set tone **(Note 3)**
5. Go on hook

**To set up the system clock from a Multiline Terminal (CM15130 must be a 0 for Station COS):**

1. Press **Speaker** key and receive dial tone
2. Press the system clock setup feature key (F0A97 in CM9000) and receive feature dial tone
3. Dial the new time (6 digits) **(Note 1) (Note 2)**
4. Receive service set tone **(Note 3)**
5. Go on hook

**Note 1:** 6 digits of time entry is hour (00-23), minute (00-59), second(00-59)  
Example: set 3:45:20 pm -> 154520

**Note 2:** 0-9 is effective to enter

**Note 3:** New time is set up when entering 6th digit of time